

EN: This Datasheet is presented by the manufacturer.

Please visit our website for pricing and availability at www.hestore.hu.

Do not reverse the positive and negative poles, and do not use the black wire directly as GND. Otherwise it will burn the sensor

