

EN: This Datasheet is presented by the manufacturer.

Please visit our website for pricing and availability at www.hestore.hu.

SR1 Series Single-Phase, Detachable Heatsink Type SSR

Single-Phase, Detachable Heatsink Type SSR

Features

- Dielectric strength: 4000 VAC (also 2,500VAC model)
- Compact, universal design for flexible installation
- High heat dissipation efficiency with ceramic PCB
- Zero cross turn-on, random turn-on models available
- Input Indicator (green LED)

Ordering Information



Solid State Relay (detachable heatsink type)



Please read "Safety considerations" in operation manual before using.



0.00.							
SR 1	I – 1	2 25	- N				
			Versio	<u> </u>	New		
			Function	No Mark	Zero cross turn-on		
				R	Random turn-on		
				15	15A		
			load current	25	25A		
		(resisti	ve load)	40	40A		
				50	50A		
					75A		
		Rated load vo	Itage	2	24-240VAC		
				4	48-480VAC		
	Rated	Rated input voltage			4-30VDC		
				4	90-240VAC		
Control phase				1	Single-phase		
Item				SD.	Solid State Polay (detachable heatsink type)		

SR

Model	Rated input voltage	Rated load voltage	Rated input current	Function	
SR1-1215-N	4-30VDC	454			
SR1-4215-N	90-240VAC	15A			
SR1-1225-N	4-30VDC	054			
SR1-4225-N	90-240VAC	25A			
SR1-1240-N	4-30VDC	40A	24-240VAC	Zero cross turn-on	
SR1-4240-N	90-240VAC	40A	24-240VAC	Zero cross turn-on	
SR1-1250	4-30VDC	504			
SR1-4250	90-240VAC	50A			
SR1-1275	4-30VDC	75 4			
SR1-4275	90-240VAC	75A			
SR1-1415	4.00\/D0			Zero cross turn-on	
SR1-1415R	4-30VDC	15A		Random turn-on	
SR1-4415	90-240VAC			Zero cross turn-on	
SR1-1425	4.00\/D0			Zero cross turn-on	
SR1-1425R	4-30VDC	25A		Random turn-on	
SR1-4425	90-240VAC			Zero cross turn-on	
SR1-1440	4.00\/D0			Zero cross turn-on	
SR1-1440R	4-30VDC	40A	48-480VAC	Random turn-on	
SR1-4440	90-240VAC			Zero cross turn-on	
SR1-1450	4.20\/D0			Zero cross turn-on	
SR1-1450R	4-30VDC	50A		Random turn-on	
SR1-4450	90-240VAC			Zero cross turn-on	
SR1-1475	4.20V/DC			Zero cross turn-on	
SR1-1475R	4-30VDC	75A		Random turn-on	
SR1-4475	90-240VAC			Zero cross turn-on	

(A) Photoelectric Sensors

(B) Fiber Optic Sensors

> (C) Door/Area Sensors

(D) Proximity Sensors

(E) Pressure Sensors

(F)

(G) Connectors/ Connector Cables/ Sensor Distribution Boxes/Sockets

(H) Temperature

(I) SSRs / Power Controllers

> J) Counters

K) Timers

Panel Meters

(M) Tacho / Speed / Pulse Meters

> l) isplay nits

)) ensor ontrollers

(P) Switching Mode Power Supplies

(Q) Stepper Motors & Drivers & Controllers

(R) Graphic/ Logic Panels

> ield letwork levices

T) Software

Autonics 1-5

Specifications

O Input

● SR1-□ □ □ □-N

Rated input voltage range		4-30VDC	90-240VACrms~ (50/60Hz)			
Allowable input voltage range		4-32VDC	85-264VACrms~ (50/60Hz)			
Max. inpu	ut current	18mA	18mArms (240VACrms~)			
Pick-up voltage		Min. 4VDC	Min. 85VACrms∼			
Drop-out voltage		Max. 1VDC	Max. 10VACrms~			
Turn-on time	Zero cross turn-on	Max. 0.5 cycle of load source + 1ms	Max. 2 cycle of load source + 1ms			
Turn-off time		Max. 0.5 cycle of load source + 1ms	Max. 2 cycle of load source + 1ms			

● SR1-□□□□

Rated input voltage range		4-30VDC	90-240VACrms~ (50/60Hz)			
Allowable input voltage range		4-32VDC	85-264VACrms~ (50/60Hz)			
Max. input current		9mA (Zero cross turn-on), 13mA (Random turn-on)	7mArms (240VACrms~)			
Pick-up vo	oltage	Min. 4VDC	Min. 85VACrms \sim			
Drop-out voltage		Max. 1VDC	Max. 10VACrms~			
Turn-on Zero cross turn-on		Max. 0.5 cycle of load source + 1ms	Max. 1.5 cycle of load source + 1ms			
time Random turn-on Max. 1ms		Max. 1ms	_			
Turn-off time		Max. 0.5 cycle of load source + 1ms	Max. 1.5 cycle of load source + 1ms			

Output

Rated load voltage range		24-240VACrms~ (50/60Hz)					48-480VACrms~ (50/60Hz)				
Allowable load voltage range		24-264VACrms~ (50/60Hz)					48-528VACrms~ (50/60Hz)				
	Resistive load (AC-51) ^{×1}	15Arms	25Arms	40Arms	50Arms	75Arms	15Arms	25Arms	40Arms	50Arms	75Arms
Min. load cui	Min. load current		0.2Arms	0.5Arms	0.5Arms	0.5Arms	0.5Arms	0.5Arms	0.5Arms	0.5Arms	0.5Arms
Max. 1 cycle surge current (60Hz)		160A	250A	400A	1000A	1000A	300A	500A	500A	1000A	1000A
Max. non-repetitive surge current (I²t, t=8.3ms)		130A ² s	300A ² s	910A ² s	4000A ² s	4000A ² s	350A ² s	1000A ² s	1000A ² s	4000A ² s	4000A ² s
Peak voltage (Non-repetitive)		600V					1200V (Zero cross turn-on), 1000V (Random turn-on)				
Leakage current (Ta=25°C)		Max. 10mArms (240VAC~/60Hz)					Max. 10mArms (480VAC~/60Hz)				
Output on voltage drop[Vpk] (Max. load current)		Max. 1.6V				Max. 1.6V					
Static off state dv/dt		500V/μs				500V/μs					

^{%1:} AC-51 is utilization category at IEC60947-4-3.

O General Specifications

-					
ngth (Vrms)	SR1- SR1- SR1- SR1- SR1- SR1- SR1- SR1-				
istance	Over 100MΩ (at 500VDC megger) (Input-Output, Input/Output-Case)				
	Input indicator: Green LED				
Mechanical	0.75mm amplitude at frequency of 10 to 55Hz (for 1 min) in each X, Y, Z direction for 1 hour				
Malfunction	0.5mm amplitude at frequency of 10 to 55Hz (for 1 min) in each X, Y, Z direction for 10 min				
Mechanical	300m/s² (approx. 30G) in each X, Y, Z direction for 3 times				
Malfunction	100m/s² (approx. 30G) in each X, Y, Z direction for 3 times				
Ambient temp.	-30 to 80°C (in case of the rated input voltage 90-240VAC∼: -20 to 70°C), storage: -30 to 100°C (The rated load current capacity is different depending on ambient temperature. Refer to ▣ SSR Derating Curve				
Ambient humi.	45 to 85%RH, storage: 45 to 85%RH				
connection	Min. 1×0.5mm ² (1×AWG20), Max. 1×1.5mm ² (1×AWG16) or 2×1.5mm ² (2×AWG16)				
al connection	Min. 1×1.5mm ² (1×AWG16), Max. 1×16mm ² (1×AWG6) or 2×6mm ² (2×AWG10)				
fixed torque	0.75 to 0.95N·m				
al fixed torque	1.6 to 2.2N·m				
	(€ c PN us (except SR1-□□□-N)				
	Approx. 111g (approx. 73g)				
	stance Mechanical Malfunction Mechanical Malfunction Ambient temp. Ambient humi. connection al connection fixed torque				

I-6 **Autonics**

^{*}For wiring the terminal, an O-ring terminal must be used.

Single-Phase, Detachable Heatsink Type SSR


SSR Derating Curve

*Be sure that the ambient temperature and the derating curve is different by the rated input voltage.


— : Rated input voltage 4-30VDC (SR1-1□□□□)

·-··: Rated input voltage 90-240VAC (SR1-4


© SR1-1215-N

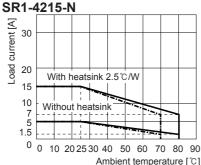


© SR1-1225-N SR1-4225-N

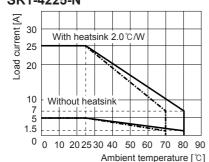


© SR1-1240-N SR1-4240-N

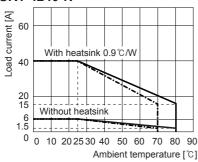


© SR1-1250/1450/1450R SR1-4250/4450

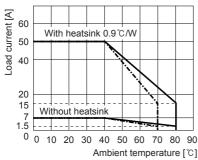


© SR1-1415/1415R SR1-4415

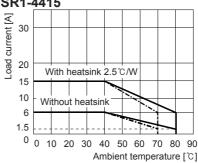


© SR1-1425/1425R SR1-4425

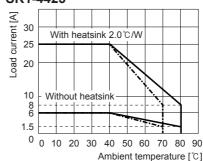

© SR1-1440/1440R SR1-4440

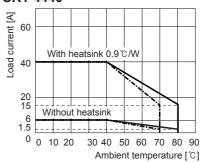

© SR1-1275/1475/1475R SR1-4275/4475

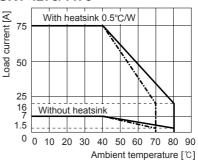

⚠Please supply less than 50% of the rated load current when installing several SSRs closely due to decreasing effectiveness of protection against heat.

(A) Photoelectric Sensors

(B) Fiber Optic Sensors

> (C) Door/Area Sensors

(D) Proximity Sensors

(E) Pressure

> (F) Rotary

(G) Connectors/ Connector Cables/ Sensor Distribution Boxes/Sockets

(H) Temperature Controllers

(I) SSRs / Power Controllers

> (J) Counters

(K) Timers

(L) Panel Meters

(M) Tacho / Speed / Pulse

> (N) Display

(O) Sensor Controllers

(P) Switching Mode Powe Supplies

(Q) Stepper Motors & Drivers & Controllers


(R) Graphic/ Logic Panels

(S) Field Network Devices


(T) Software

Autonics 1-7

Dimensions (unit: mm)

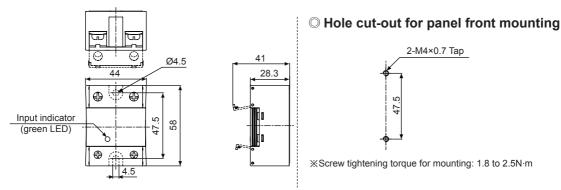

Connections

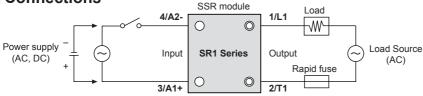

Proper Usage



M High temperature caution

Make sure do not touch the heat sink or the unit body while power is supplied or right after load power is turned off. If not, it may cause a burn.

/ Cautions during use

- 1. Attach a heatsink and ventilate for smooth convection current. If not, congested heat transfer may cause product failure or malfunction.
- 2. For mounting multiple SSR, please keep certain installation intervals for heat prevention. For horizontal installation (when the heights of input part and output part are equal), it is recommended to apply less than 50% of the rated load current.
- 3. Make sure do not touch the heatsink or the unit body while power is supplied or right after load power is turned OFF. If not, it may cause a burn.
- 4. Connect the proper cable for the rated load current with output terminal.
- 5. Use rapid fuse of which I2t is under 1/2 of SSR I2t in order to protect the unit from load's short-circuit current. In case of a short-circuit please replace the fuse which has same specification.
- 6. In case that load's current is lower than SSR min. load current, connect dummy resistance to the load in parallel so as to make load's current higher than SSR min. load current.
- 7. When selecting phase control with random turn-on model, install the noise filter between load and load's source.
- 8. Make sure that the screw on output terminal is tightly fastened. Using the unit with loose bolt may cause product failure or malfunction.
- 9. Do not touch the load's terminal even if output is OFF. It may cause electric shock.
- 10. In case of 4-30VDC model, the signal input should be insulated and limited voltage/current or Class 2, SELV power
- 11. To attach the heatsink, use Thermal Grease as below or that of equal specification.
 - **Thermal Grease: GE TOSHIBA (YG6111), KANTO-KASEI (FLOIL G-600), SHINETSU (G746)
- 12. Avoid following environments to install this unit.
 - ① Where temperature/humidity is beyond the specification
 - 2) Where dew condensation occurs due to temperature change
 - 3 Where inflammable or corrosive gas exists
 - Where direct rays of light exist
 - ⑤ Where severe shock, vibration or dust exists
 - Where near facilities generating strong magnetic forces or electric noise
- 13. This product may be used in the following environments.
 - 1 Indoors
 - ② Max. altitude: 2,000m
 - 3 Pollution degree 2
 - 4 Installation category III

J-8 **Autonics**